



Loading & Firing Instructions for The Disposable Handheld Confetti Cannon

(Single use cannon – discard after firing)

To Load The Disposable Handheld Cannon:

- 1) Your Disposable Handheld cannons were shipped to you pre-loaded with Confetti and/or Streamers. Please make sure the black plastic cap at the end of the cannon barrel (with a small hole in it) is securely in place. This cap holds the confetti and/or streamers in place and will automatically discharge when you fire your cannon – do not remove it before use. Please note that the cap will shoot in the direction you point the cannon barrel so please use appropriate caution.

To Arm and Fire The Disposable Handheld Cannon:

- 1) Included in your package please find a plastic bag which contains one 12 Gram CO2 cylinder for each cannon assembly. Remove the CO2 cylinders from the bag.
- 2) The cannons are composed of two parts: the barrel that contains the confetti and/or streamers and the handle. The cannons were shipped to you with the barrel and handle screwed together. Remove the black handle from the barrel by unscrewing the black handle in a counter clockwise rotation.
- 3) Insert a CO2 cylinder, with the neck (small end) facing out, into the black handle or cup.
- 4) When you are ready to fire your cannon, re-connect the cannon barrel and the black handle by PARTIALLY (approximately ½ turn) screwing the two parts back together turning the handle in a clockwise rotation. DO NOT TIGHTEN. THE CANNON IS NOW ARMED!!!
- 5) Point cannon up at approximately a 45-degree angle or higher depending on the desired effect. Hold the cannon firmly with one hand near the base just above the black handle and with your other hand screw in the black handle in a clockwise rotation. Turn in swift full turn motions until the cannon fires – please note that it might take 3 – 5 twists before the cannon discharges. DO NOT TWIST SLOWLY AS A FIZZLE OR MISFIRE MIGHT OCCUR.

NOTE: Do not store the Disposable Cannon fully assembled with the CO2 inserted as accidental discharge can easily occur. Additionally, make sure you point the cannon in the desired direction when you begin twisting the handle for cannon actuation.

SPECIAL EFFECTS CAN BE DANGEROUS. Please read the above directions before use. Never point a Disposable Handheld Cannon at anyone after it is armed with CO2. These cannons are to be used by adults who have read these instructions. The cannons will shoot streamers to approximately 30 feet and confetti to approximately 20 feet so use caution. Use at your own risk.

****IF FURTHER INSTRUCTION IS NEEDED, PLEASE CALL 818-994-7388****
e-mail: confetti@artistryinmotion.com

Artistry In Motion, Inc 15101 Keswick Street Van Nuys, CA 91405
Tel: 818.994.7388 Fax: 818.994.7688 Website: www.artistryinmotion.com