



## Loading & Firing Instructions for The Handheld Confetti Cannon

### **To Load The Handheld Cannon:**

- 1) Cut off one end of the plastic sleeve containing the confetti or streamers.
- 2) Carefully slide the open end of the confetti sleeve directly into the barrel. Slide the contents of the sleeve into the barrel. Remove the empty plastic sleeve from the barrel. Repeat with second sleeve (Two-10 inch sleeves are used for a full load.) If you are mixing streamers and confetti, load the streamers first.
- 3) Place a paper compression cap over the mouth (open end) of the cannon. Tape it in place by wrapping paper masking tape around the barrel & the lip of the cap. Do not tape over the mouth of the cannon! You are now ready to arm the cannon.

### **To Arm and Fire The Handheld Cannon:**

- 1) Prior to arming the cannon, please practice pulling the drawstring trigger with one quick motion. When you are comfortable with the feel of the trigger, arm the cannon with CO2.
- 2) To arm the cannon, return the trigger to its closed position, and then screw the CO2 cylinder into the threaded port on the trigger. Be sure it is screwed in hand tight. **THE CANNON IS NOW ARMED!!!**
- 3) Point cannon up at approximately a 45-degree angle or higher depending on the desired effect. Hold the cannon firmly with one hand near the base just above the CO2 cartridge. Pull the drawstring trigger with your other hand to the open position **with one swift motion**. You will feel some resistance and there may be slight recoil upon firing. Always remove the used CO2 cartridge before closing the trigger.

**SPECIAL EFFECTS CAN BE DANGEROUS.** Please carefully read the above directions before use. Never point a cannon at anyone after it is armed with CO2. These cannons are to be used by adults who have read these instructions. Use at your own risk. SEE WARNING ON REVERSE SIDE

**\*\*IF FURTHER INSTRUCTION IS NEEDED, PLEASE CALL 818-994-7388\*\***  
e-mail: [confetti@artistryinmotion.com](mailto:confetti@artistryinmotion.com)

## **WARNING**

The Handheld Confetti Cannon is designed and produced for use by adults. This device is intended to launch confetti, and/or streamers manufactured by Artistry In Motion, Inc. This device can fire confetti and streamers in excess of 50 feet. This device emits a loud noise when it is used. It is the responsibility of the user to ensure his safety and the safety of the public.

- DO NOT FIRE THIS DEVICE DIRECTLY AT ANY INDIVIDUAL.
- DO NOT FIRE ANYTHING FROM THIS DEVICE OTHER THAN CONFETTI OR STREAMERS.
- DO NOT USE ANY OTHER CO2 CARTRIDGE IN THIS DEVICE OTHER THAN THOSE SOLD BY ARTISTRY IN MOTION, INC. SPECIFICALLY FOR USE WITH THIS PRODUCT.
- KEEP THE PUBLIC A SAFE DISTANCE FROM THIS DEVICE AT ALL TIMES.
- DO NOT LEAVE THIS DEVICE UNATTENDED IF IT IS ARMED WITH A CO2 CARTRIDGE AND READY TO FIRE.
- IF THIS CONFETTI CANON CONTAINS METALLIC STREAMERS OR CONFETTI BE AWARE THAT THESE PRODUCTS CAN CONDUCT ELECTRICITY. KEEP THEM CLEAR OF ANY POWER LINES OR OTHER ELECTRONIC DEVICES. THE USER MUST TAKE INTO CONSIDERATION THE LOCATION OF POWER LINES, AS WELL AS THE WIND CONDITIONS WHEN DETERMINING IF IT IS SAFE TO FIRE THESE CANNONS IN PROXIMITY TO ELECTRIC POWER.
- DO NOT ALLOW CHILDREN TO FIRE THIS DEVICE.