



Loading & Firing Instructions for  
the Disposable Handheld Confetti Cannon  
(Single use cannon – discard after firing)

**To Load The Disposable Handheld Cannon:**

- 1) Your Disposable Handheld cannons were shipped to you pre-loaded with Confetti and/or Streamers. Please make sure the black plastic cap at the end of the cannon barrel (with a small hole in it) is securely in place. This cap holds the confetti and/or streamers in place and will automatically discharge when you fire your cannon – do not remove it before use. **Please note that the cap will shoot in the direction you point the cannon barrel so please use appropriate caution.**

**To Arm and Fire The Disposable Handheld Cannon:**

- 1) Included in your package please find a plastic bag which contains one 12-Gram CO<sub>2</sub> cylinder for each cannon. Remove the CO<sub>2</sub> cylinders from the bag.
- 2) The cannons are composed of two parts: the barrel that contains the confetti and/or streamers and the handle. The cannons were shipped to you with the barrel and handle screwed together. Remove the black handle from the barrel by unscrewing the black handle in a counter-clockwise rotation.
- 3) Insert a CO<sub>2</sub> cylinder, with the neck (small end) facing out, into the black handle or cup.
- 4) When you are ready to fire your cannon, re-connect the cannon barrel and the black handle by PARTIALLY (approximately 1 turn) screwing the two parts back together turning the handle in a clockwise rotation. **DO NOT TIGHTEN. THE CANNON IS NOW ARMED!!!**
- 5) Point cannon up at approximately a 45-degree angle or higher depending on the desired effect. Hold the cannon firmly with one hand near the base just above the black handle and with your other hand screw in the black handle in a clockwise rotation. Turn in **SWIFT FULL TURN MOTIONS** until the cannon fires – please note that it might take 2 - 3 twists before the cannon discharges. **DO NOT TWIST SLOWLY AS A FIZZLE OR MISFIRE MIGHT OCCUR.**

NOTE: Do not store the Disposable Cannon fully assembled with the CO<sub>2</sub> inserted as accidental discharge can easily occur. Additionally, make sure you point the cannon in the desired direction when you begin twisting the handle for cannon actuation.

**SPECIAL EFFECTS CAN BE DANGEROUS.** Never point a Disposable Handheld Cannon at anyone after it is armed with CO<sub>2</sub>. These cannons are to be used by adults who have read these instructions. The cannons will shoot streamers to approximately 30 feet and confetti approximately 20 feet.

**PLEASE READ WARNING BELOW**

**\*\*IF FURTHER INSTRUCTION IS NEEDED, PLEASE CALL 818-994-7388\*\***

**Artistry In Motion, Inc. 19411 Londelius Street, Northridge, CA 91324  
Tel: 818.994.7388 Fax: 818.994.7688 Website:www.artistryinmotion.com**



## **WARNING**

The Disposable Handheld Confetti Cannon is designed and produced for use by adults. This device is intended to launch confetti, and/or streamers manufactured by Artistry In Motion, Inc. This device can fire confetti and streamers in excess of 30 feet. This device emits a loud noise when it is used. It is the responsibility of the user to ensure his safety and the safety of the public.

- DO NOT FIRE THIS DEVICE DIRECTLY AT ANY INDIVIDUAL.
- DO NOT FIRE ANYTHING FROM THIS DEVICE OTHER THAN CONFETTI OR STREAMERS.
- DO NOT USE ANY OTHER CO<sub>2</sub> CARTRIDGE IN THIS DEVICE OTHER THAN THOSE SOLD BY ARTISTRY IN MOTION, INC. SPECIFICALLY FOR USE WITH THIS PRODUCT.
- KEEP THE PUBLIC A SAFE DISTANCE FROM THIS DEVICE AT ALL TIMES.
- DO NOT LEAVE THIS DEVICE UNATTENDED IF IT IS ARMED WITH A CO<sub>2</sub> CARTRIDGE AND READY TO FIRE.
- IF THIS CONFETTI CANNON CONTAINS METALLIC STREAMERS OR METALLIC CONFETTI BE AWARE THAT THESE PRODUCTS CAN CONDUCT ELECTRICITY. KEEP THEM CLEAR OF ANY POWER LINES OR OTHER ELECTRONIC DEVICES. THE USER MUST TAKE INTO CONSIDERATION THE LOCATION OF POWER LINES, AS WELL AS THE WIND CONDITIONS WHEN DETERMINING IF IT IS SAFE TO FIRE THESE CANNONS IN PROXIMITY TO ELECTRIC POWER.
- DO NOT ALLOW CHILDREN TO FIRE THIS DEVICE.

**Artistry In Motion, Inc. 19411 Londelius Street, Northridge, CA 91324  
Tel: 818.994.7388 Fax: 818.994.7688 Website: [www.artistryinmotion.com](http://www.artistryinmotion.com)**